



PreSETS

Step-by-step instructions

Anker PreSETS are ready-made modules for pCon.planner. PreSETS are composed of tiles or planks that are perfectly matched to each other and can be easily laid in a repeating pattern throughout the room.

<u>Anker PreSET download and unzip</u>	<u>2</u>
<u>Anker PreSET import and use</u>	<u>2</u>
<u>Anker PreSET list of articles</u>	<u>5</u>
<u>Anker PreSET Customize Article</u>	<u>6</u>
<u>Anker PreSET Excel installer help</u>	<u>7</u>
<u>Contact</u>	<u>8</u>

Anker PreSETS step-by-step instructions

ANKER



Anker PreSET download and unzip

After downloading a Hatema PreSET zip file from our homepage to your computer, right-click on the file and select "Extract All...". Confirm the window that now opens by clicking on the "Extract" button.

A new folder with the name of the downloaded Zip file will now be created, containing the unzipped files. (Fig. 1)

These files consist of a text file with standard information, a JPG file with a preview image of the PreSET, an Excel file as a laying aid, and the actual PreSET DWG file for pCon.planner. (Fig. 2)

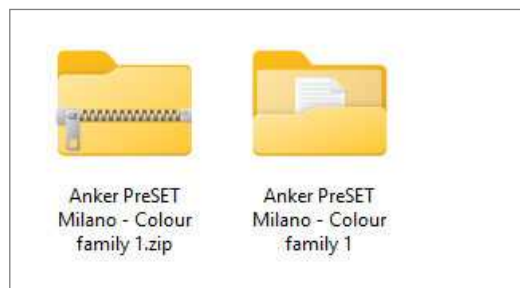


Fig. 1

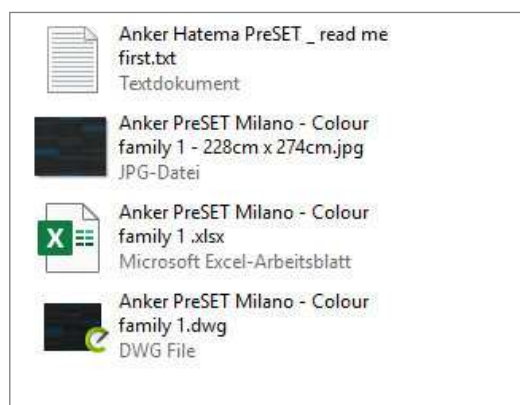


Fig. 2

Anker PreSET import and use

Once you have created a room with standard flooring in pCon.planner, you must select it and break the grouping in the Edit application menu.

Please note: You must repeat this step exactly, ungroup it twice in a row! (Fig. 3)

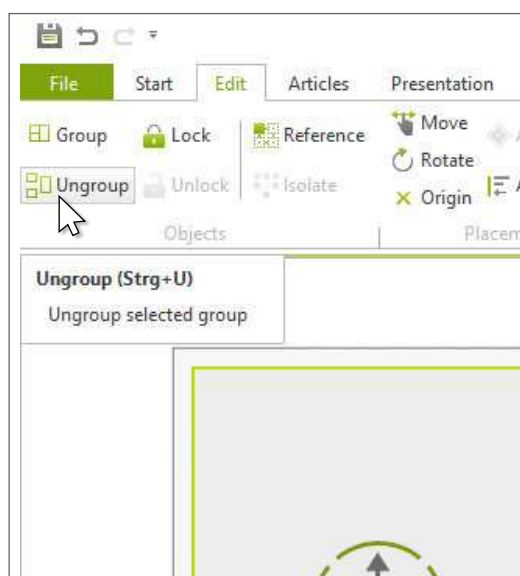


Fig. 3

Anker PreSETS step-by-step instructions

ANKER



Now you need to assign the type “Solid with border” to this selected floor using the Properties / Shape toolbar. (Fig. 4)

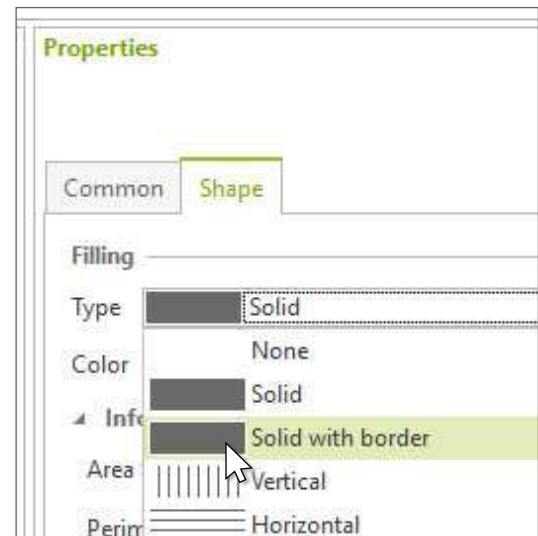


Fig. 4

The unzipped PreSET DWG file can either be imported into an open file using the import function in pCon.planner or simply dragged and dropped from Windows Explorer into the open file. (Fig. 5)

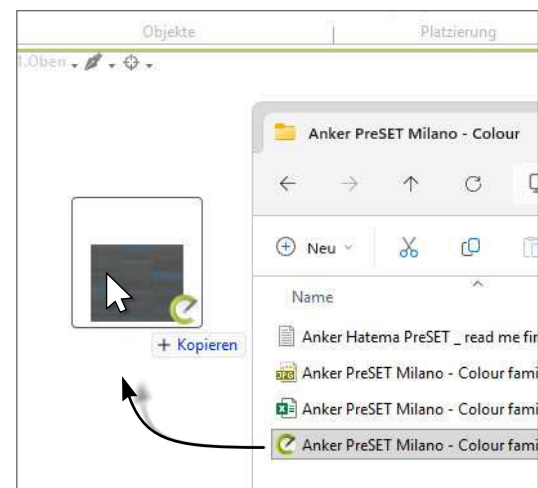


Fig. 5

Now simply drag the PreSet onto the floor. (Fig. 6)



Fig. 6

Anker PreSETS step-by-step instructions

ANKER



Select the floor and click on Arrangement in the Edit application menu. (Fig. 7)

By then clicking on PreSET, pCon.planner knows that you want to arrange/distribute the PreSET on the floor.

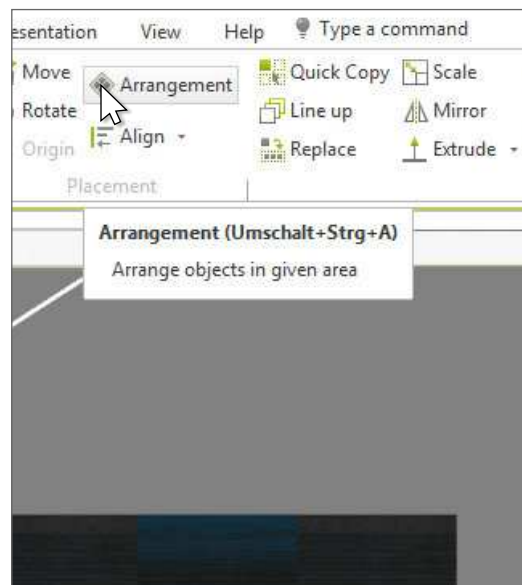


Fig. 7

To transfer the distance and offset of the PreSETS to the program, click directly on the lower left corner of the PreSET.

A copy of the PreSET will now stick to the mouse pointer. Place this copy once in the **upper left corner** and again in the **lower right corner**. A slight magnetism will help you do this. (Fig. 8)

See also the film at

<https://anker-carpets.com/en/collection-details-presets/hatema-26>

Now the floor is completely filled with the PreSET.

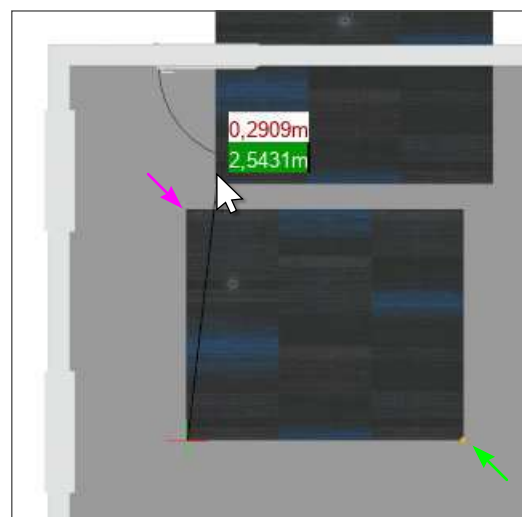


Fig. 8

To remove the overhanging tiles or planks, click on Trim in the Properties toolbar under the Arrangement tab. (Fig. 9)

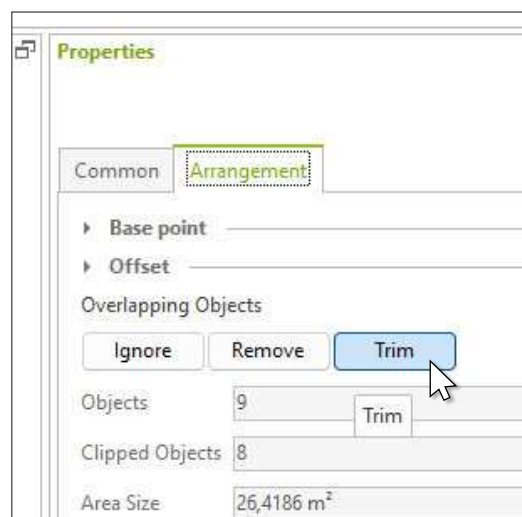


Fig. 9

Anker PreSETS step-by-step instructions



Anker PreSET list of articles

To determine the number of planks used, click on the Article List button in the Item application menu.

In the window, check the boxes for Summarize, Hide empty folders, and Anker-Teppichboden.

Now confirm the window by clicking on the Create button. (Fig. 10)

In the item list that now opens, you can select the first item and read the design color in the Description column and the number of planks in the Quantity column, among other things.

(Fig. 11)

In this example:

34 Hatema 03 planks in color 358

50 Hatema 02 planks in color 939

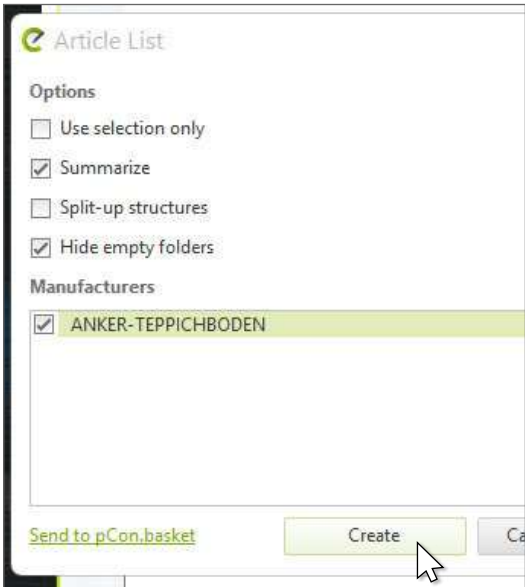


Fig. 10

Position	RefNr	Hersteller	Serie	Artikelnummer	Beschreibung	Menge	EP
1		ANK	TE	009086	HATÉMA: Tufted 1/10", loop pile, multicolored pattern GROESSE: 46 design-color: hatema_03_009086_358 total weight g/m²: 3630 impact noise insulation: 23db backing material: 140 sound absorption coefficient: aw020 total thickness: 6_0 availability: Lager minimum order quantity: 4_18 package unit: 4_18 Position net price	34,00	
2		ANK	TE	009085	HATÉMA: Tufted 1/10", loop pile, multicolored pattern GROESSE: 46 design-color: hatema_02_009085_939 total weight g/m²: 3630 impact noise insulation: 23db backing material: 140 sound absorption coefficient: aw020 total thickness: 6_0 availability: Lager minimum order quantity: 4_18 package unit: 4_18 Position net price	50,00	

Fig. 11

Cut planks or tiles are always counted in full due to the design of the system. The installer is always responsible for determining the final quantity.

Anker PreSETS step-by-step instructions

ANKER



Anker PreSET customize article

Of course, the colors or items in a PreSET can be freely customized according to your needs. In the first step, you must select the imported PreSET and choose Ungroup in the Edit application menu.

(Fig. 12)

In the next step, select a plank that you want to change and customize it using the Properties toolbar.

See also Hatema Color Worlds

<https://anker-arpets.com/en/collection/designs-colors/hatema-26>

If the plank is still selected, hold down the [Ctrl] key and click on the words Artikelbezeichnung (Item description) (1) and Dessin-Farbe (Pattern color) (2). Now release the [Ctrl] key and click on the Copy icon (3) at the bottom. (Fig. 13) This copies the properties to the clipboard.

Now you need to select all the planks you want to change.

To do this, select a second plank to be changed. In the Item application menu, click on Article Selection. Now press the 'Get values for selected article' button in the window that opens. (Fig. 14) This loads the article details of the selected plank into the window.

To be on the safe side, you should enter the color number of the plank under Article Text. In the window that is still open (Fig. 6.3), now click on the button with the plus symbol. This selects all items with the previously retrieved details. Leave the selection active.

Back in the Properties toolbar, click on the 'Assign Properties' button (4). (Fig. 13)

If you now group the entire PreSET again, you can plan it as described above.

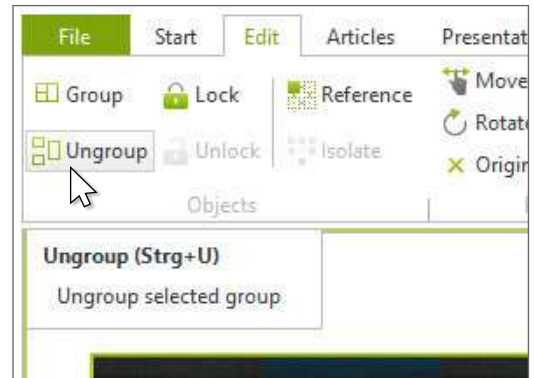


Fig. 12

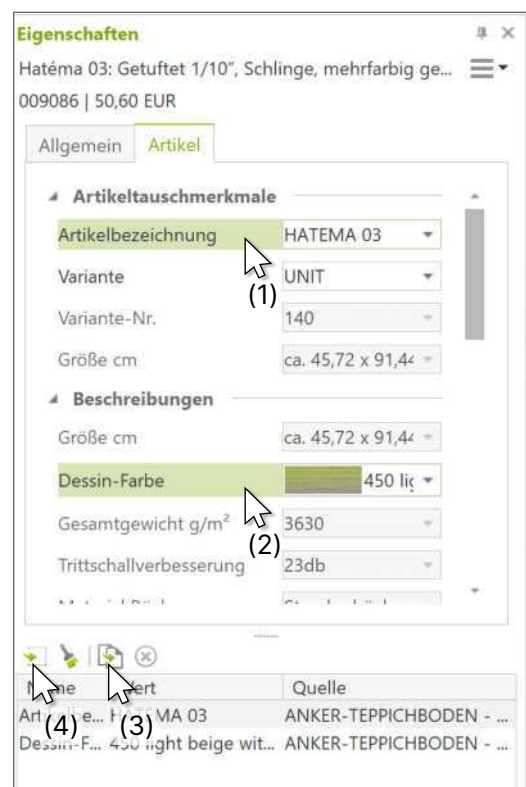


Fig. 13

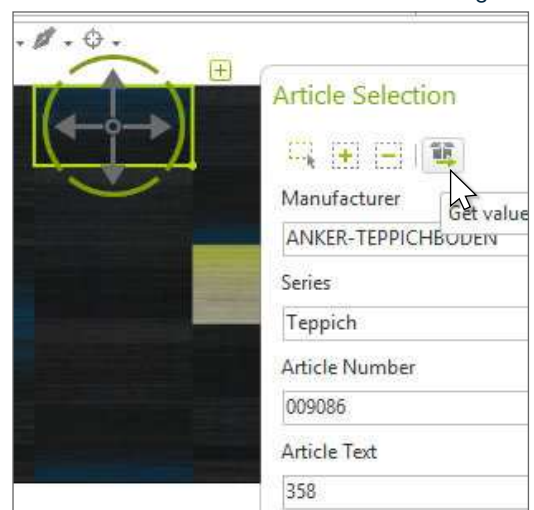


Fig. 14

Anker PreSETS step-by-step instructions



Anker PreSET Excel installer help

To help your installer keep track of everything, there is a Excel file that displays the PreSET with the item and color names. This can be found in the PreSET folder that you created when you unzipped the zip file. (Fig. 15)

If you only need to change the item or colors in the PreSET, you only need to change the names highlighted in green; the rest will adjust automatically. (Fig. 16)

Please remember to provide the installer with additional information such as images, etc.


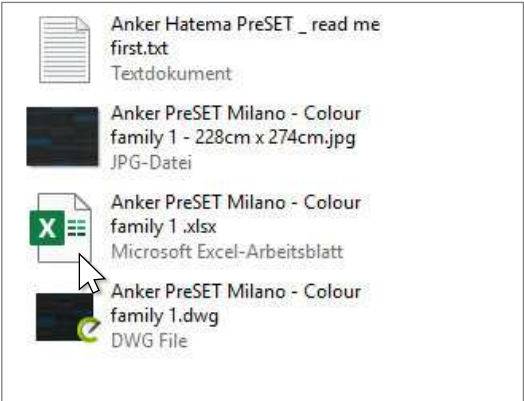


Fig. 15

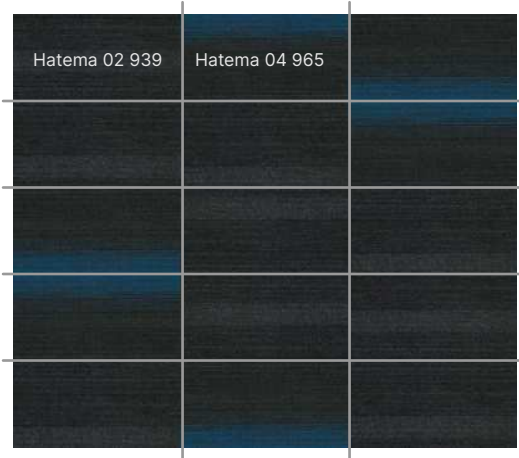

	A	B	C	D	E	F	G	H
1								
2								
3								
4								
5								
6								
7								
8								
9								
10								
11								
12								
13								
14								

Anker PreSET Milano

Datum: 01.01.2025
Auftrag:
Weiter Informationen:

Hatema 02 939	Hatema 04 965	Hatema 04 965
Hatema 02 939	Hatema 02 939	Hatema 04 965
Hatema 04 965	Hatema 02 939	Hatema 02 939
Hatema 04 965	Hatema 02 939	Hatema 02 939
Hatema 02 939	Hatema 04 965	Hatema 02 939

nur die grün hinterlegten Felder editieren, die übrigen passen sich automatisch an
only edit the fields highlighted in green, the others adapt automatically
Größe einer Planke - Size of a plank: 45,72 x 91,44 cm

Fig. 16



How can we help you?

Would you like us to create a
customized PreSET?

Or do you need a PreSET for another
program in a different data format?

ANKER Gebr. Schoeller GmbH + Co. KG

Zollhausstraße 112

D-52353 Düren

Telefon +49 (0) 24 21 / 804-0

pcon@anker-dueren.de

<https://anker-carpets.com/en/>

<https://anker-carpets.com/en/service/planning-tools>



<https://pcon-solutions.com/planner/>